

Dismantling

Dismantle the original licence plate holder incl. licence plate light.

Mounting licence plate holder

1. remove the circlip (Abb.1)
2. Loosen the axle nut (SW 36) - opposite (Abb.2)



Abb.1



Abb. 2

3. Put on the licence plate holder and fix it with the supplied clamping nut (SW30, siehe Abb.3)
Tightening torque: 120Nm
4. the arm is secured against rotation with the worm screw on the lower edge of the licence plate holder. (1, Abb.4)



Abb.3

We recommend using a medium-strength threadlocker (e.g. LOCTITE 243, blue) for the clamping nut.

Wiring

1. remove the seat
2. pull the original cable from the rear forwards under the seat and guide it backwards along the frame to the licence plate holder.
3. Connect the cables properly



Abb. 4: Lateral licence plate holder with clamping nut



Abb. 5: mounted number plate holder