


Dismantle the original air filter cover

1. Loosen screws (2), remove air filter cover (6+7).
2. Remove the seal (9) from the air filter cover.

Fit new air filter cover

1. place the gasket (9) on the air filter cover.
2. mount air filter cover with screws (2).

Tightening torque: 4 - 7Nm

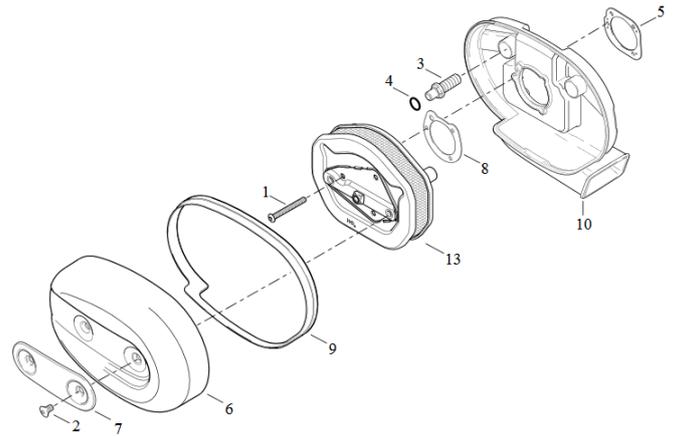

We recommend using a medium-strength screw lock (e.g. LOCTITE 243, blue) for all screws.



Abb. 1 – Mounted air filter cover "Slotted"



Abb. 2 – air filter cover „FIN“