


Dismantle original front fender

1. Loosen the screws (4) of the upper bracket (6).
2. Unscrew the front fender from the bracket (1).

Fitting the "Bobber" front fender

1. Mount the front fender to the bracket with the screws (1).
Tightening torque: 3.5 to 4.5Nm
2. mount the bracket on the motorbike with the screws (4).
Tightening torque: 25 to 30Nm

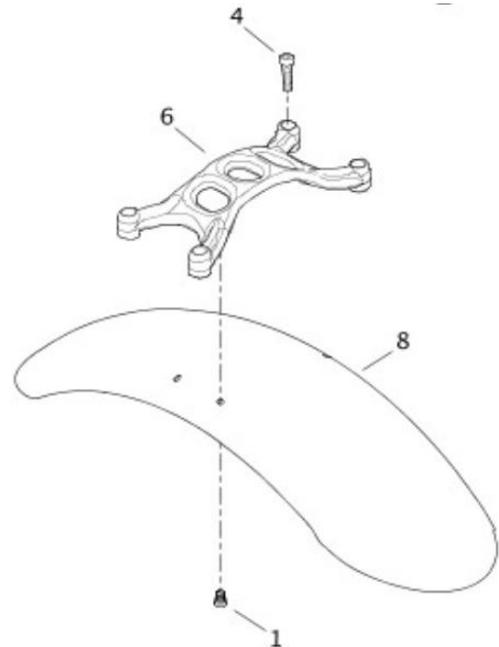

We recommend using a medium-strength screw lock (e.g. LOCTITE 243, blue) for all screws.



Abb. 1 - Mounted front fender



Abb. 2 – front fender "Bobber"