

Note: The bracket (6) and fender (8) form one unit on the "Old School" front fender.

Dismantle original front fender

1. Loosen the screws (4) of the upper bracket (6).

Fitting the "Old School" front fender


mount the front fender to the motorbike with the screws (4).

Tightening torque: 10 to 15Nm

To do this, use the stainless steel screws supplied in the set:

4 x ISO 7380 5/16 -18 UNC x ½.

4 x washer ISO 7091-8

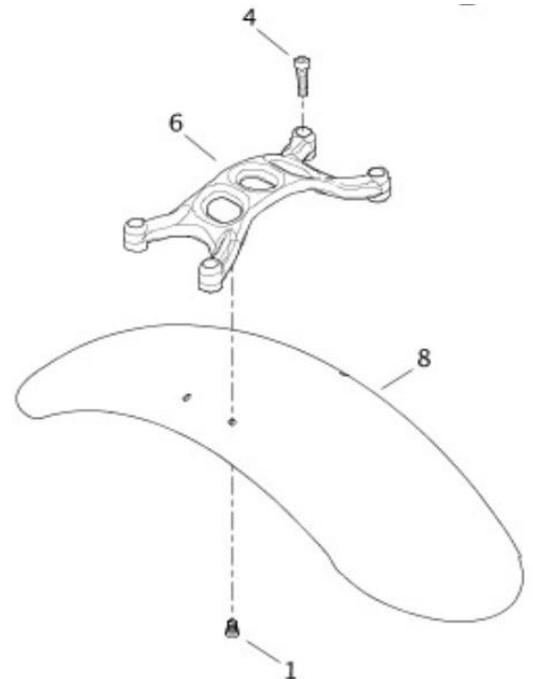

We recommend using a medium-strength screw lock (e.g. LOCTITE 243, blue) for all screws.



Abb. 1 - Mounted front fender
Example photo, painted version



Abb. 2 Front fender "Old School"
incl. mounting material