


1. loosen the screws from the frame (1)
2. place the frame cover on the frame and fasten it with the screws.  
Tightening torque: 10 - 15Nm

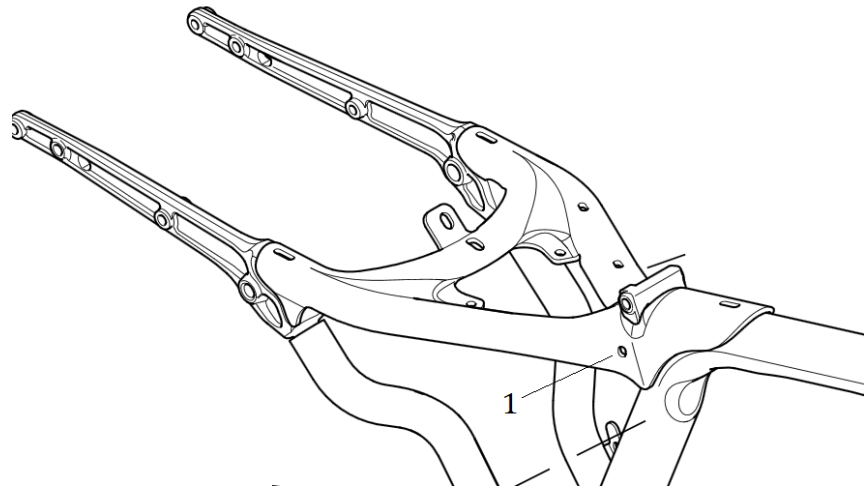

## **! Note !**

the frame cover long (HD-SPO073) can only be used with a shortened frame, therefore the original fender with light system and number plate holder must be dismantled. We recommend fitting a 3-in-1 indicator set (e.g. HD-SPO32) incl. indicator holder (HD-SPO022) and a side number plate holder (HD-SPO012).

We recommend using a medium-strength screw lock (e.g. LOCTITE 243, blue) for all screws.



Abb. 1 – mounted frame cover



Abb. 2 – Frame cover long